PlayBase
Quick Start Guide

Designed & Engineered by Karuma

Product Specifications 2
Your Device 3
Use of Memory Card & Battery 4
Home Screen 5
USB Connection 6
Wi-f Setup 7
Language & Keyboard 8
Application Management 9
Photos & Videos 10
Audio 11
Product Safety Information 12

PlayBase

Congratulations on your purchase of PlayBase! Your package comes with the following items. If any of them is missing, please contact support@play-base.com.

- Device
- USB cable
- DC adapter
- Earphones
- Quick Start Guide

PRODUCT SPECIFICATIONS

- Model : PBGO1
- Panel : 7 inch capacitive
- Resolution : 800 x 480
- RAM : 1G DDR3
- Camera : 0.3MP front
- Output : Micro SD, micro USB, Earphones
- Adapter : 5V, 2A
- Battery : 4h wifi / video playback, 60h standby
- Dimension : 204mm(L) × 122mm(W) × 9.7mm (H)

PlayBase

Your Device

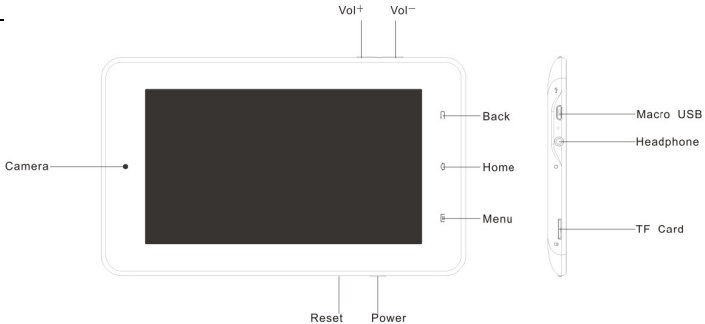

Power key ⏻	Press and hold to power on/off the device. Short press to put device into standby mode and again to awaken device.
Home key	Press to return to the Home screen from anywhere.
Menu key	Press to open a list of actions available on the current screen.
Return key	Press to go back to the previous screen or to dismiss a dialog box or menu.

USE OF MEMORY CARD

Insert Memory Card

Insert microSD card with the gold contacts facing up until “click” sound is heard.

Browse Files In Memory Card

Run “Explorer” program, showing all the files under the root directory. Select “SD card” open to browse the contents in card.

Removal Of Memory Card

Close all applications or files, which have been opened from the card. Push card lightly to eject it from the slot.

Do not remove the memory card while the device is turned on. Sudden removal of the memory card may cause data loss or unpredictable system hang up.

CHARGING BATTERY

Connect one end of DC adapter to micro USB of the device and the other to the wall outlet to begin charging.

*** Charging time with in-box 5V/2A DC adapter, less than 3 hours (power-off mode).

Battery life may vary depending on user usage. Battery can also be charged when device (backlight off) connects to computer through USB cable.

HOME SCREEN

From Home screen, you can quickly access common applications, view notifications and check connection status.

Applications can be added to/removed from Home Screen by long pressing the respective icons.

Status Bar

At the top of your screen is the status bar. On the left side, icons will appear, notify you of new messages, alerts, alarms, and more. On the right side of the status bar, you will see the connection status icons.

	Return & Exit		Downloading
	SD card is full		Content downloaded
	Battery charge indicators		Wi-Fi service connected
	No SD card		Battery is charging

	USB connected		Wireless services are off
	Warning		Silent mode

USB CONNECTION

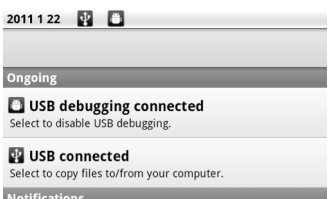

1. Connect device to computer via provided micro USB cable.
2. You will see a **USB icon** in the status bar. Tap the bar and slide your finger down the screen to open the list of notifications.
3. Select **USB connected** to turn on USB connection between the device and your computer.
4. **Turn off** the USB connection when you are done with the device internal storage data access.
5. Disconnect USB connection.

Wi-Fi SETUP

1. Tap on **Settings** icon.
2. Select **Wireless & networks** > **Wi-Fi** to activate.
3. Select **Wi-Fi settings** > **Network notification** to start detecting networks. Available networks will be listed. Select the Wi-Fi network you would like to connect to.
4. Select **Add Wi-Fi network** to add a connection.
5. When internet connection is successful, the wireless connection icon in the status bar will appear.
6. Go back to Home screen/application list to click on **Browser** icon to start surfing internet.

NOTE: Connecting to a secured network will prompt for password. Enter password then select **Connect**.

LANGUAGE & KEYBOARD

You can select your language and the keyboard to use under **Settings > Language & Keyboard.**

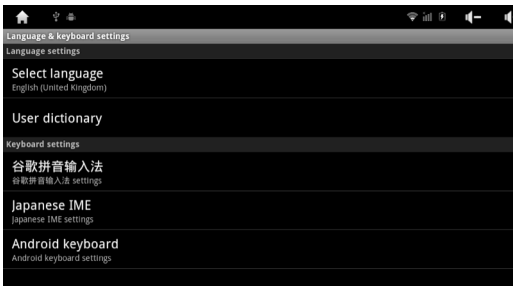

Keyboard Settings

To turn on/off sound effects or vibration for the touch pad and keyboard,

1. Select the keyboard to be used.
2. Edit the settings to your preferred selection.

NOTE: APK for other keyboards have to be installed and **Turn on** prior to usage.

APPLICATION MANAGEMENT

Install

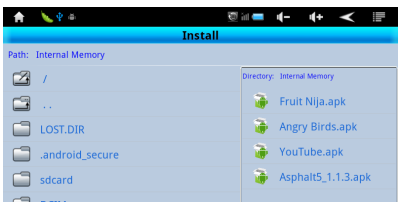

1. Tap on **ApkInstaller** icon
2. Select **Install** and find the path which you have placed your APK. APK available for installation will be shown on the right hand box.
3. To install third party APK, select **Settings** > turn on **Unknown Sources**
4. Select the APK you like to install and press **Install**.

Uninstall

1. Tap on **ApkInstaller** > **Manage**.
2. Select the application you like to uninstall and there will be a pop up window.
3. Select **Uninstall** > **OK** to confirm.

PHOTOS & VIDEOS

Photo and Videos playback

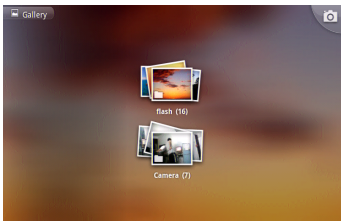

1. Tap **Gallery** icon to view image and video files.
2. Select the file to playback.
3. To view previous/next image, swipe left/right of the screen.
4. To play slideshow, tap **Menu > Slideshow**.
5. For videos, tap to rewind/pause/fast forward the video clip.

Camera and video record

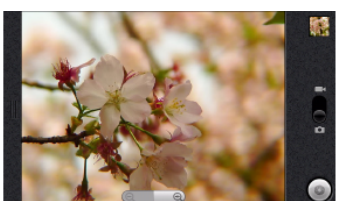

Device is equipped with 0.3 megapixels camera to take photos and videos.

1. Tap > **Camera** and aim device at the subject.
2. Tap on the lower right circle to take photo.
3. To record video, slide the right scroll bar upwards.
4. Aim the device at the subject.
5. Tap lower right circle to start recording.
6. Tap again to stop.

AUDIO

Music playback

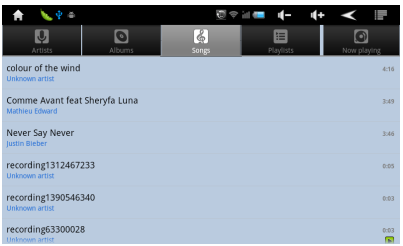

1. Tap on **Music** icon to view all music. Your audio files are categorized into Artists, Albums and Songs.
2. Select the desired music file under the category to playback.

Sound Recorder

1. Tap on **Sound Recorder** icon for audio recording.
2. Tap on the icons below to stop /play / stop the record.
3. You can also view the recordings under **Music > Playlists > My recordings.**

PRODUCT SAFETY INFORMATION

1. Do NOT place objects on top of the Device, as objects may scratch the screen.
2. Do NOT expose Device to dirty or dusty environments or place Device on an uneven or unstable surface.
3. Do NOT insert any foreign objects into the Device.
4. Do NOT expose Device to strong magnetic or electrical field.
5. Do NOT expose Device to direct sunlight as it can damage the LCD Screen. Keep it away from heat sources.
6. Device should only be used in environments with ambient temperatures between 5°C (41°F) - 35°C(95°F).
7. Do NOT use the Device in the rain.
8. The Device and the adapter may produce some heat during normal operation or charging. Do NOT leave the Device on your lap to prevent discomfort or injury from heat exposure.
9. POWER INPUT RATING: Refer to the rating label on the Device and be sure that the power adapter complies with the rating. Only use accessories specified by the manufacturer.
10. Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning.
    Never use abrasives or cleaning solutions.
11. Disconnect the Device from an electrical outlet and power off before cleaning Device.
12. Do NOT disassemble the Device, only a certified service technician should perform repair.